

Model 100

Oil type

Hydraulic oil

refer to „Specifications for Service Products“ page 342

Capacity

total (ltr)

1.6–1.8

- Check oil level in the reservoir **with the engine running**.
- If necessary top up to maximum level with the engine running.

Attention! For this purpose, all hydraulically operated parts such as windows and sliding roof **must be closed** and the seat adjustment must be in the **reclining position**, as otherwise it is possible that the reservoir will overflow during subsequent operation.